ESTES-COX CORP. 1295 H Street Penrose, CO 81240


PRINTED IN CHINA




ASSEMBLY TIP


Read all instructions before beginning work on your model. Make sure you have all parts and supplies.

TEST-FIT ALL PARTS TOGETHER BEFORE SNAPPING TOGETHER.

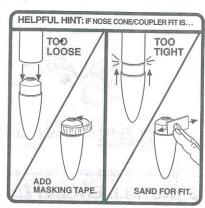

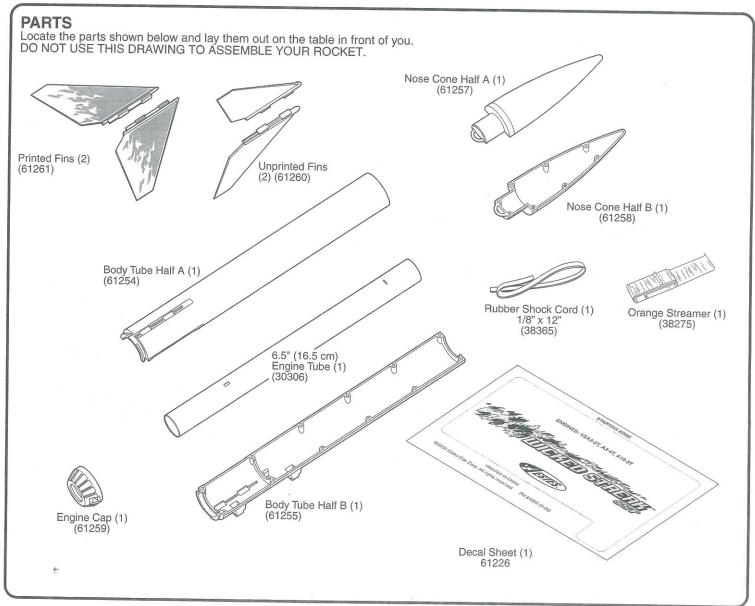


1. ASSEMBLE NOSE CONE A. Match the Nose Cone Half A with Nose Cone Half B and snap together. Completed Nose Cone 2. INSTALL SHOCK CORD B. Pass the other end of the Shock Cord through the slit at the top of the Engine Tube. Pull the Shock Cord through the tube A. Tie a double knot at one end of the Shock Cord. until the double knot stops at the slit. 3. INSTALL ENGINE TUBE A. Align the hole on the Engine Tube with the pin on Body Tube Half B (the one with launch lugs). Insert the Engine Tube. LAUNCH LUGS 4. ATTACH FINS

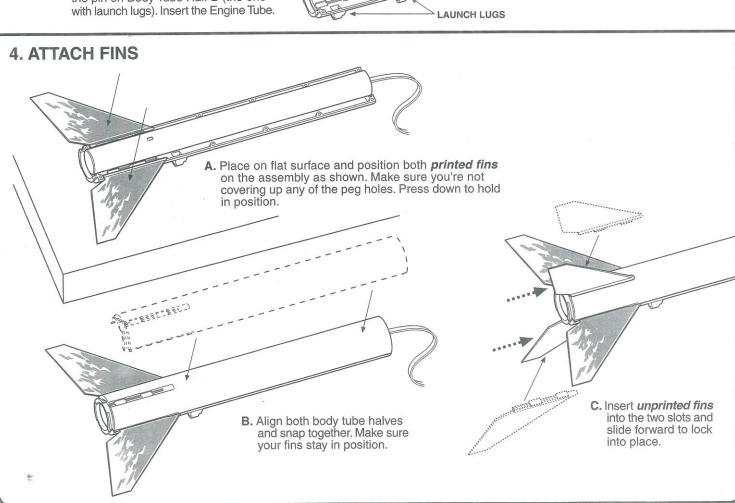

5. ATTACH ENGINE CAP

A. Attach Engine Cap and turn clockwise to lock into place.

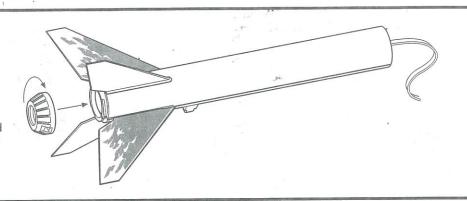

6. ATTACH SHOCK CORD AND STREAMER

A. Tie the Shock Cord to the Nose Cone using a double knot. B. Tie the Streamer to the Shock Cord using a double knot.

DECAL PLACEMENT

A. Peel decal from backing sheet and apply as shown. Rub down to remove bubbles.

 
NOTE: The decal must be applied as it reinforces the body tube seams.



PREPARE FOR FLIGHT

A. Insert two squares of loosely crumpled recovery wadding into Body Tube.


NOTE: Only Estes Wadding (302274) recommended.



B. Fold Streamer in half.



 C. Roll Streamer.



PREPARE ENGINE


WARNING: FLAMMABLE

To avoid serious injury, read instructions & NAR
Safety Code included with engines.
PREPARE YOUR ENGINE ONLY WHEN YOU ARE
OUTSIDE ATTHE LAUNCH SITE PREPARING TO LAUNCH!


If you do not use your prepared engine, remove the igniter before storing your engine.



C. Separate Igniter & Plug.

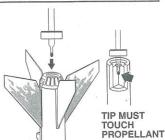


D. Drop in Igniter.

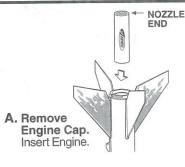




B. Replace Engine Cap.

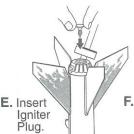

F. Firmly push all the way in.



G. Bend igniter wires as shown.

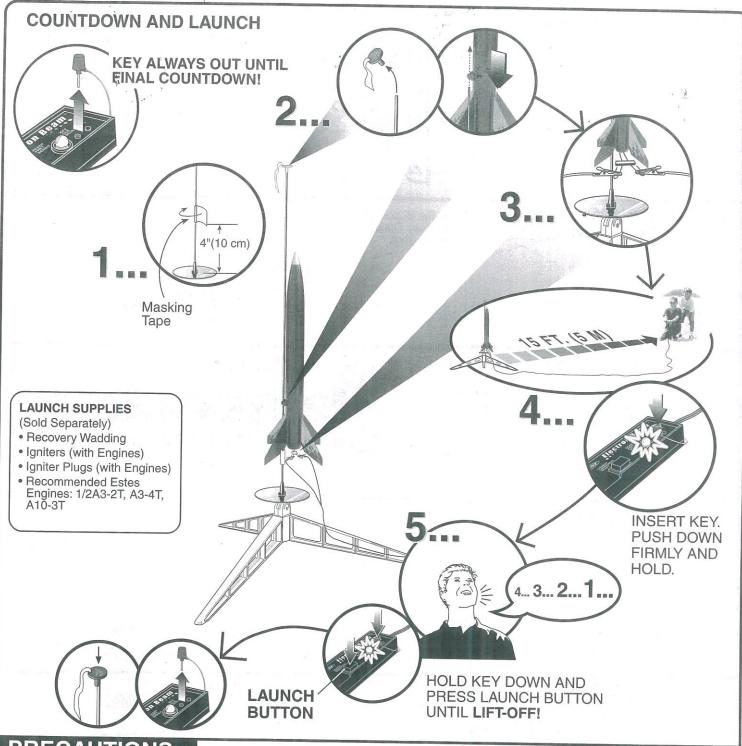

PRECAUTIONS

















PRE-LAUNCH CHECKFor safety, never launch a damaged rocket. Check the rocket's body, nose cone and fins. Also, check the engine mount, recovery system and launch lugs (2). Repair any damage before launching the rocket.

FLYING YOUR ROCKET

Choose a large field (250 ft. [76 m] square) free of dry weeds and brown grass. The larger the launch area, the better your chance of recovering your rocket. Football fields and playgrounds are great. Launch only with little or no wind and good visibility.

Always follow the National Association of Rocketry (NAR) SAFETY CODE.

MISFIRES

TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET! Disconnect the igniter clips and remove the engine. Take the plug and igniter out of the engine. If the igniter has burned, it worked but did not ignite the engine because it was not touching the propellant inside the engine. Put a new igniter all the way inside the engine without bending it. Push the plug in place. Repeat the steps under Countdown and Launch.