


NO DRY GRASS MISFIRES

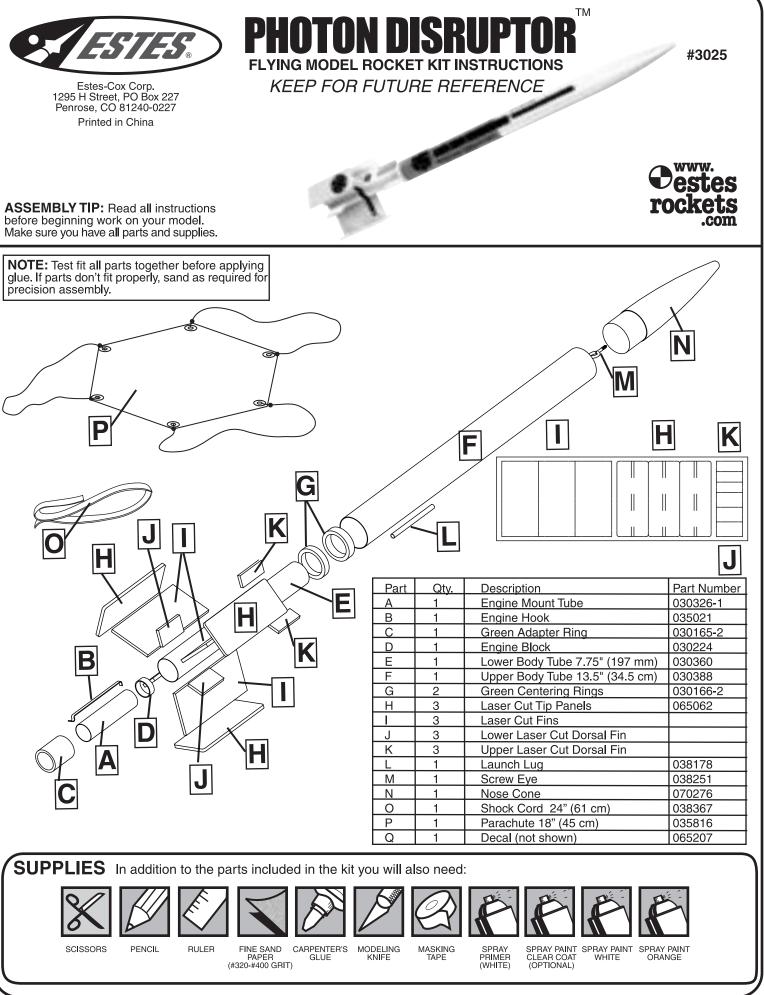


© 2009 Estes-Cox Corp. All rights reserved. PN 065206 (7-09)


plug in place. Repeat the steps under Countdown and Launch.


TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET! Disconnect the igniter clips and remove the engine.

Take the plug and igniter out of the engine. If the igniter has burned, it worked but did not ignite the engine because it was not touching the propellant inside the

engine. Put a new igniter all the way inside the engine without bending it. Push the

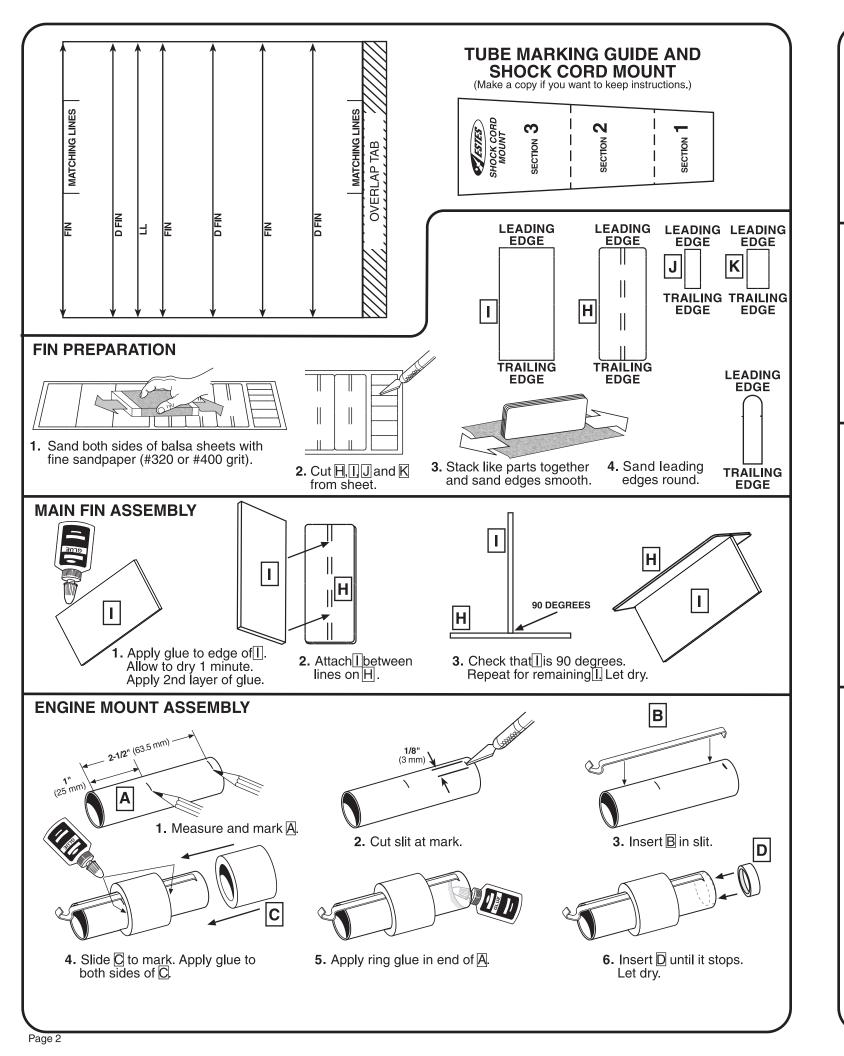

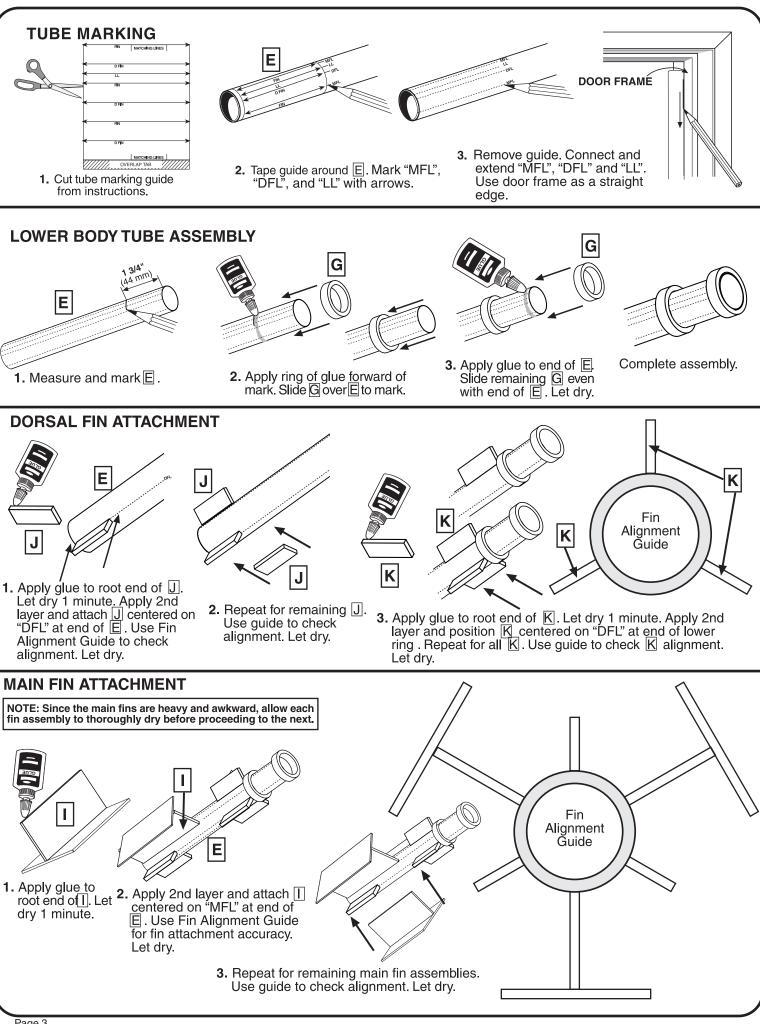

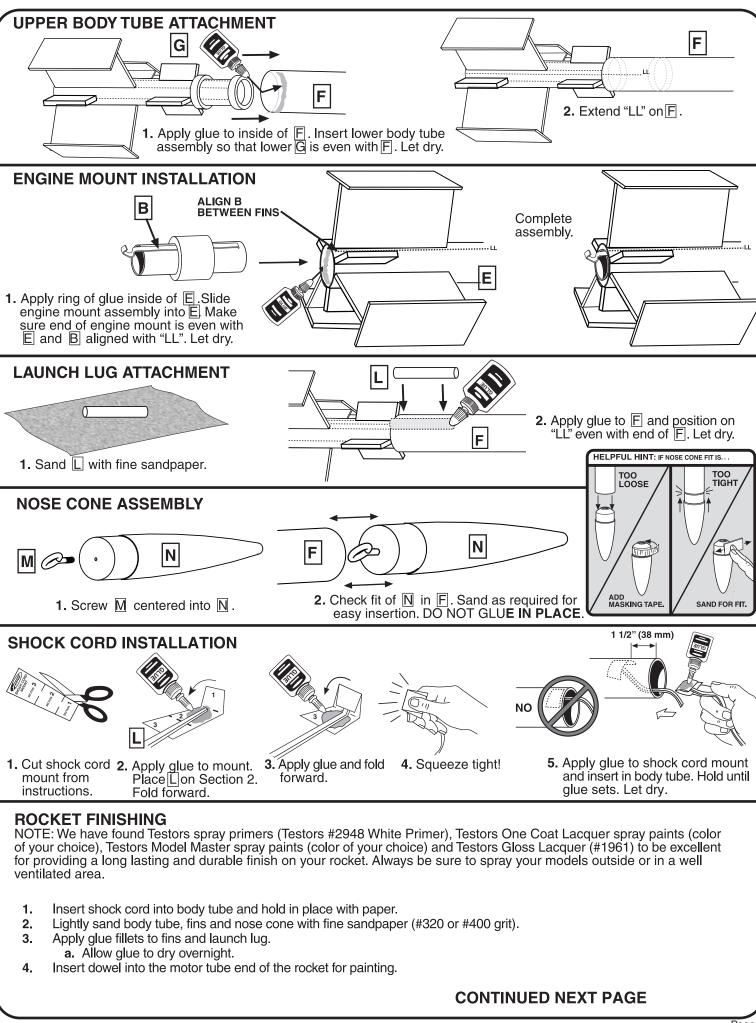

Page 3