





SPACE CRATER™







MODEL ROCKET INSTRUCTIONS

KEEP FOR FUTURE REFERENCE

IMPORTANT: Please record date found on decal and keep for future reference.

Read all instructions. Make sure you have all parts and supplies. Test fit all parts before applying glue. Sand as necessary for precision assembly. Product color and shape may vary.

SUPPLIES














A/B 072928/929




C 073006

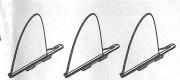

D 073005 Engine cap



E 031923Body tube

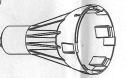

J 061343 Nose cone bottom



H 061345 Egg cushion bottom



G 061344 Egg cushion top



061342 Nose cone top


090001-7265 Self-stick decal (not shown)




F 068248 Launch lugs




K 038362 Shock cord

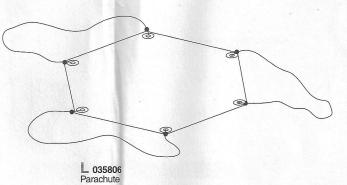



SHOCK CORD MOUNT

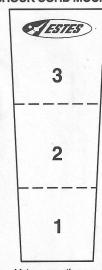



Make a copy if you want to keep instructions.

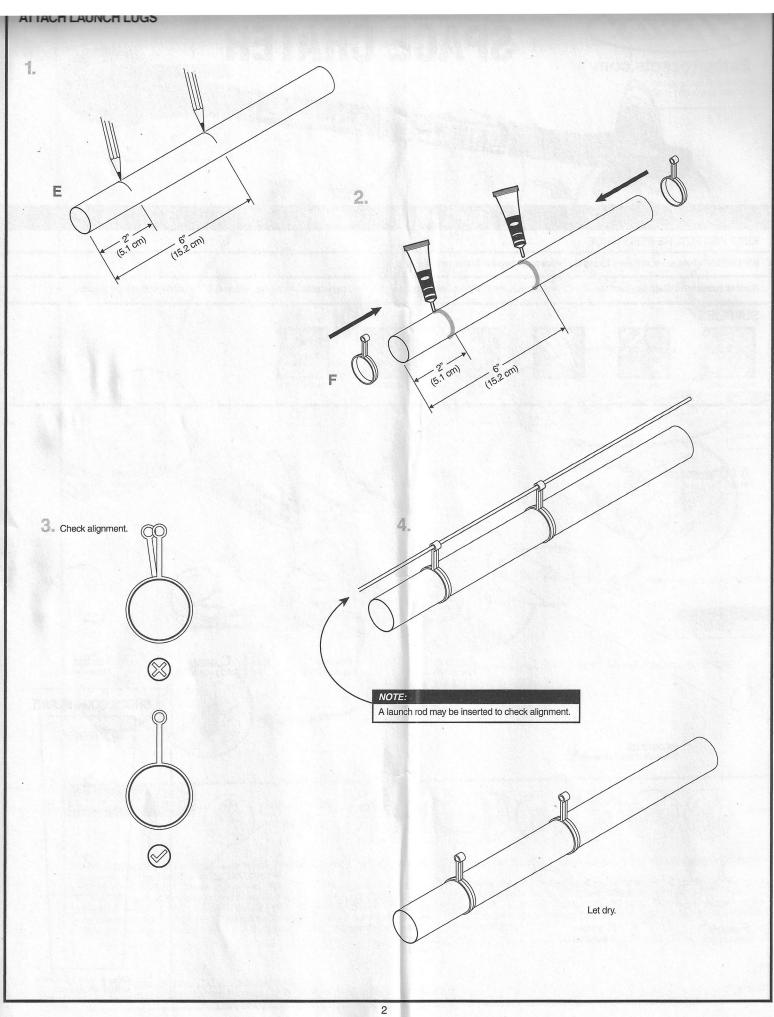


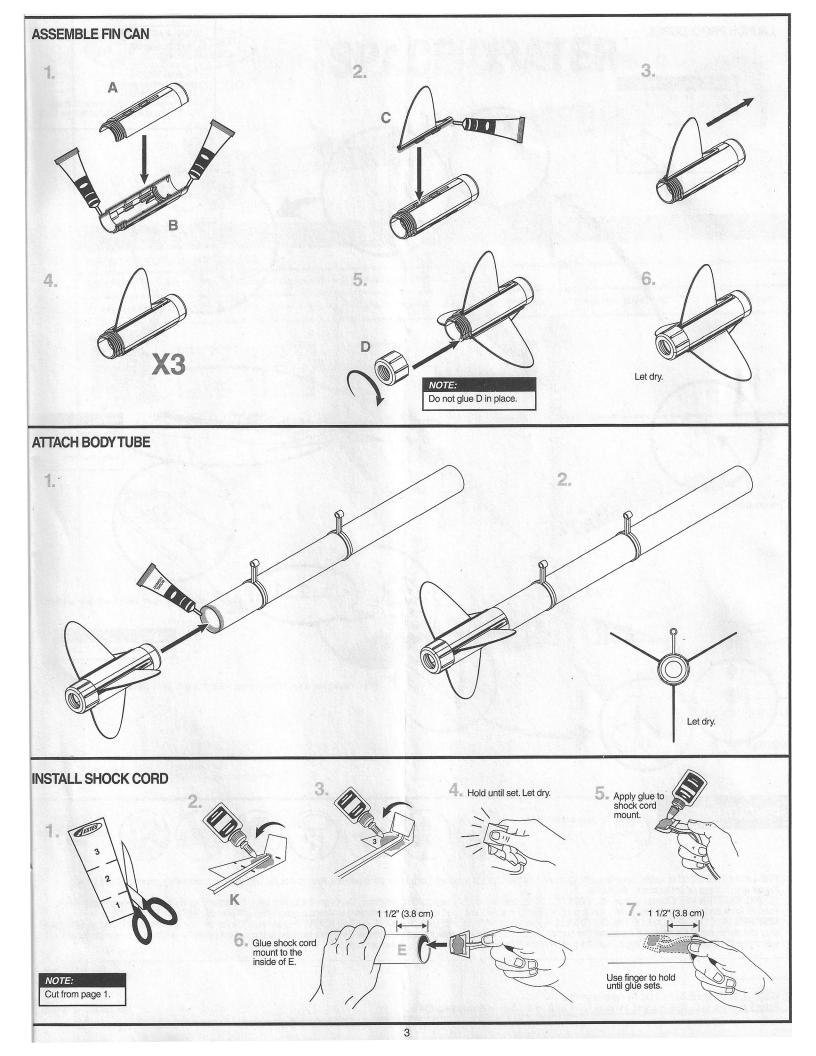


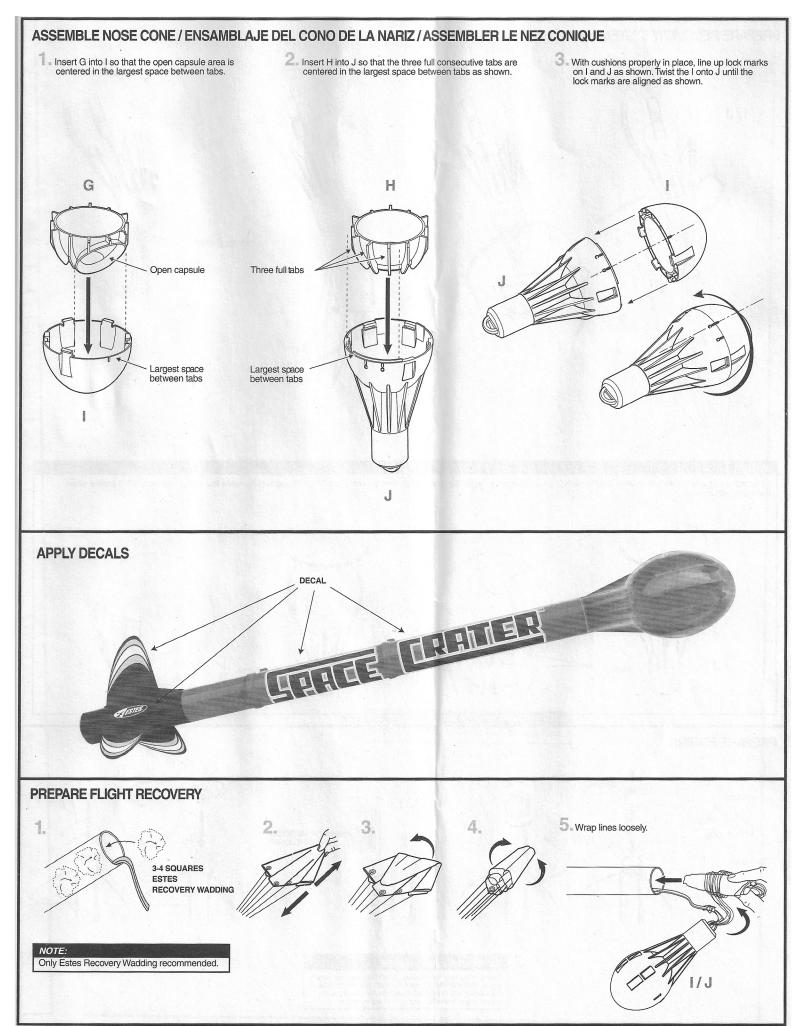

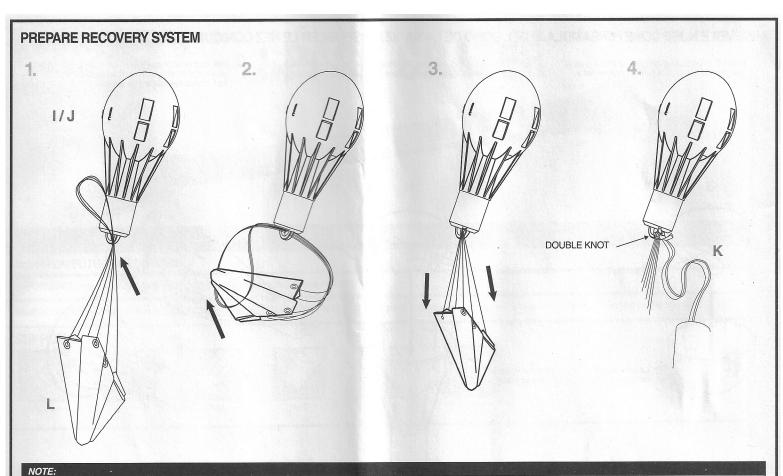

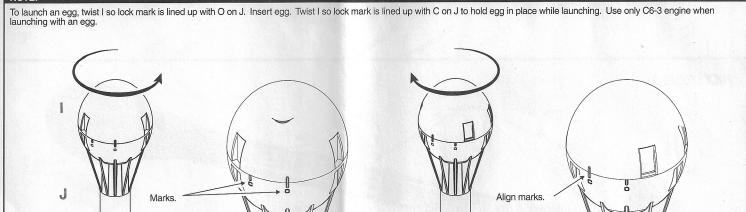

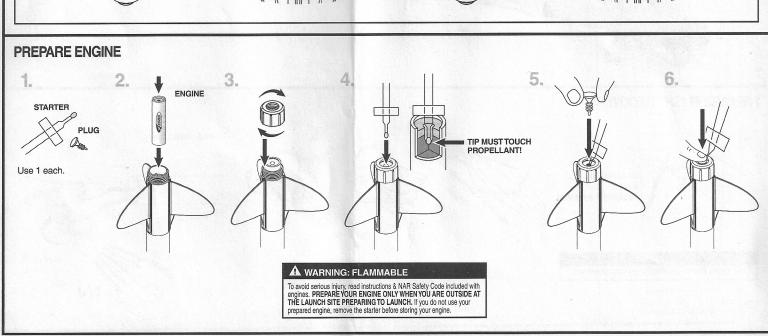

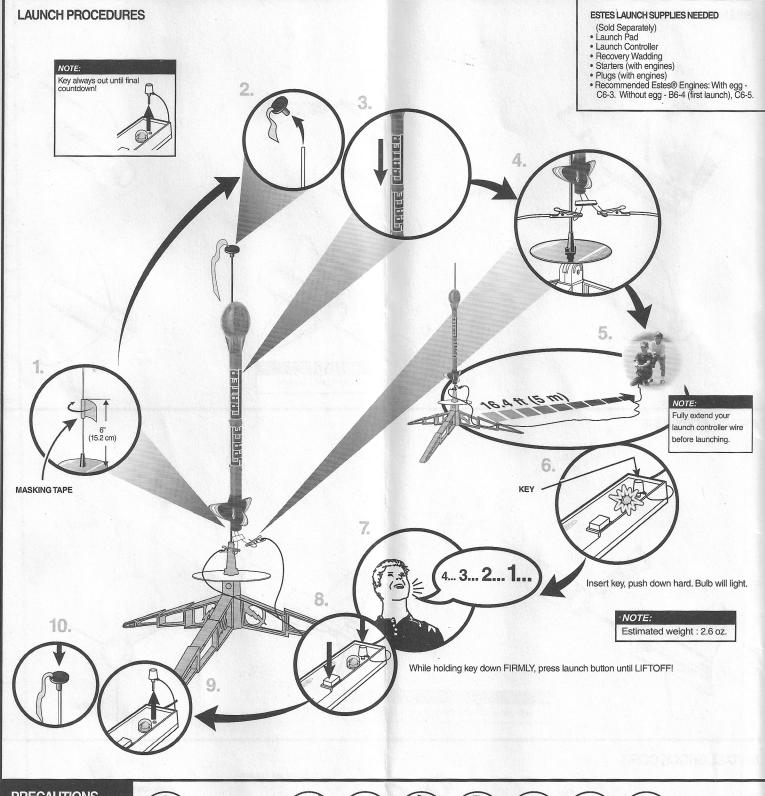

PRECAUTIONS



NAR SAFETY CODE















NO DRY GRASS OR WEEDS

PRE-LAUNCH CHECK For safety, never launch a damaged rocket. Check the rocket's body, nose cone and fins. Also, check the engine mount, recovery system and launch lug(s).

Repair any damage before launching the rocket.

FLYING YOUR ROCKET Choose a large field (500 ft [152 m] square) free of dry weeds and brown grass. The larger the launch area, the better your chance of recovering your rocket.

Football fields and playgrounds are great. Launch only with little or no wind and good visibility. Always follow the National Association of Rocketry (NAR) SAFETY CODE.

MISFIRES TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET! Disconnect the starter clips and remove the engine. Take the plug and starter out of the engine. If the starter has burned, it worked but did not ignite the engine because it was not touching the propellant inside the engine. Put a new starter all the way inside the engine without bending it. Push the plug in place. Repeat the steps under Countdown and Launch.













SPACE GRATER

FLYING MODEL ROCKET KIT





"Crate" your egg into space!

Soars up to

Without egg: C6-5

Other recommended engines:

Without egg: B6-4

With egg: C6-3

Length:

18.5 in. 47 cm

Wingspan:

0.98 in. 25 mm

Diameter:

15 in. 38.1 cm

Recovery: Parachute 15 in. (38.1 cm)

EST7265



BEGINNER

INTERMEDIATE

ADVANCED

EXPERT

MASTER