



A SUBSIDIARY OF DAMON

Drifter


Cat. No. 1214

The Astron Drifter is a high performance parachute recovered rocket designed for both sport and duration competition flying. It combines high altitude capability with a large parachute capacity. If built carefully your Astron Drifter will give you many spectacular flights for your research program, fun or contests.

PARTS LIST

The kit consists of the following parts as illustrated below:

- A) 1 Body tube type BT-50H (7.75" long) 30360
- B) 1 Engine holder tube type BT-20J (2.75" long) . 30326
- C) 1 Stage coupler type JT-50C (1" long) 30260
- D) 2 Adapter rings type RA-2050 30124
- E) 1 Engine block type EB-20A 30224
- F) 1 Balsa nose cone type BNC-50K 70262
- G) 1 Screw eye type SE-2A 38252
- H) 2 Interlocking snaps type SV-2 38269
- I) 1 Shock cord type SC-1 (18" long) 85730
- J) 1 12" parachute type PK-12A 85564
- K) 1 24" parachute type PK-24A 85568
- L) 1 216" shroud line cord type SLT-216 38245
- M) 12 Tape discs type TD-3F 38406
- N) 1 Launching lug type LL-2B (2-3/8" long) 38178
- O) 1 Sheet balsa fin stock type BFS-20 32102
- P) 1 Pattern and shroud sheet type SP-14 82872

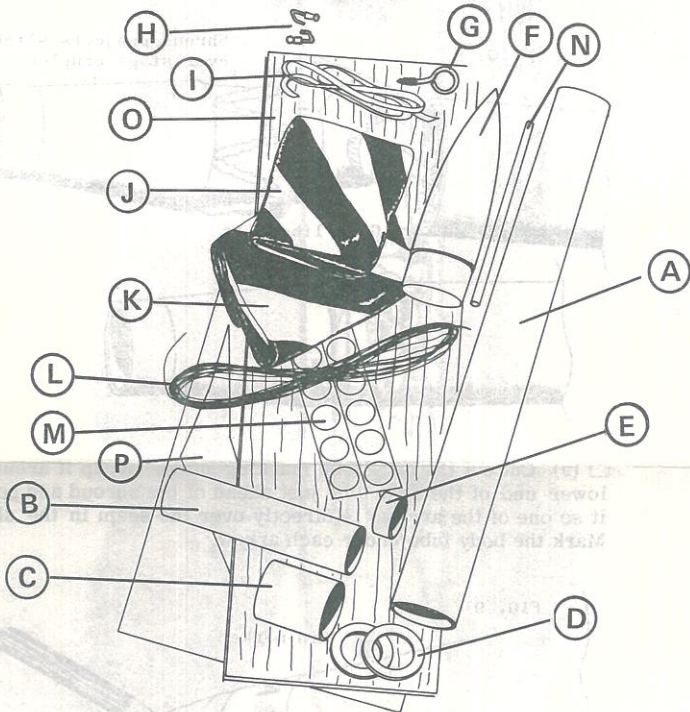


In addition to the materials included with your kit you will need the following tools and supplies:

- 1) Modeling knife or single edge razor blade
- 2) Scissors
- 3) Extra strong white glue
- 4) Ball point pen or pencil
- 5) Fine and extra fine grit sandpaper.
- 6) Paint brushes, sanding sealer and paint or dope


IMPORTANT:

Read the entire assembly instructions carefully before beginning work on your rocket. Then start construction, following each step in order, checking off each step as it is completed.

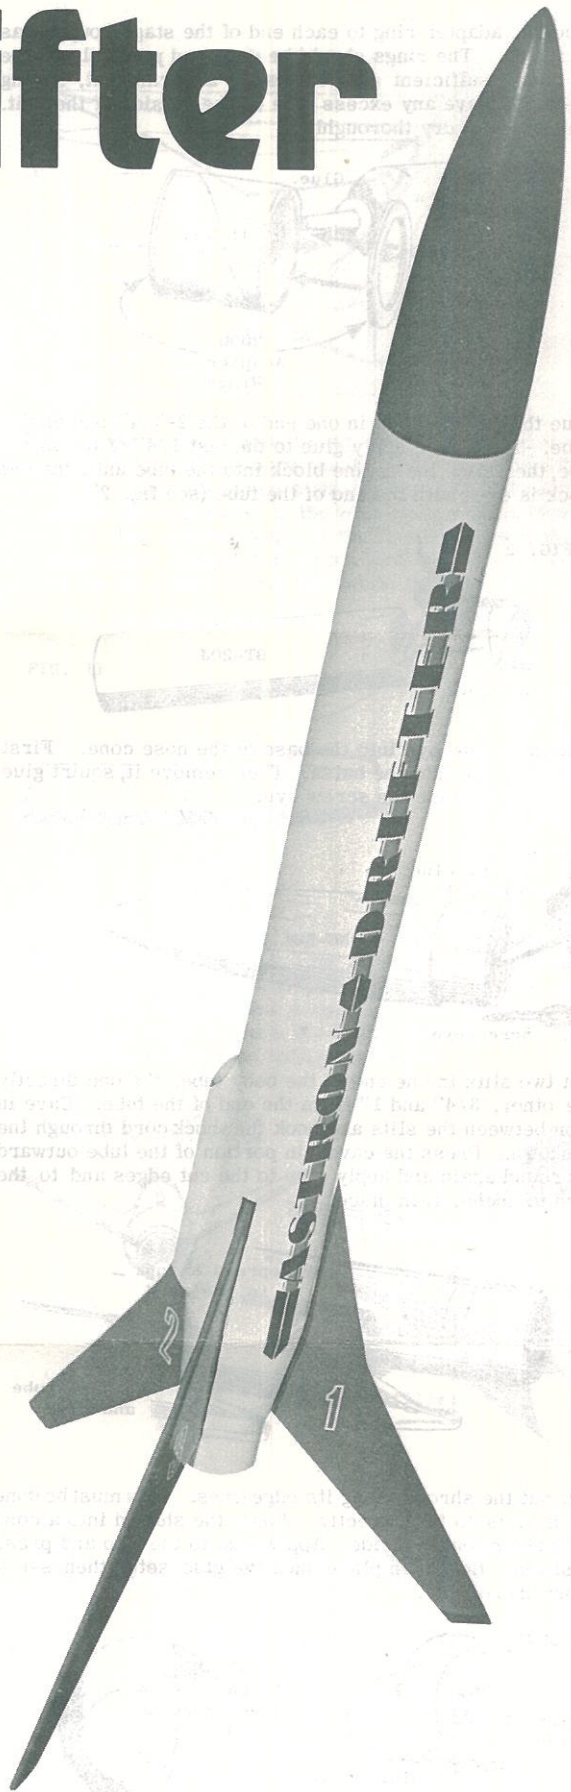


ESTES INDUSTRIES
PENROSE, COLO. 81240


- (1) Glue one adapter ring to each end of the stage coupler as shown in fig. 1. The rings should be centered perfectly on the coupler. Apply sufficient glue to insure a permanent, strong joint, but do not leave any excess glue on the outside of the unit. Set the unit aside to dry thoroughly.

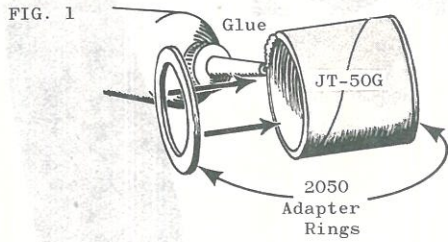


- (2) Glue the engine block in one end of the 2-3/4" long engine holder tube. To do this, apply glue to the last 1/4" of the inside of the tube, then slide the engine block into the tube until the end of the block is even with the end of the tube (see fig. 2).

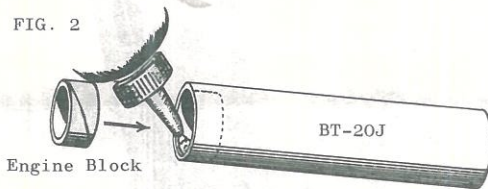


- (3) Glue the screw eye into the base of the nose cone. First insert the screw eye into the balsa. Then remove it, squirt glue into the hole and replace the screw eye.

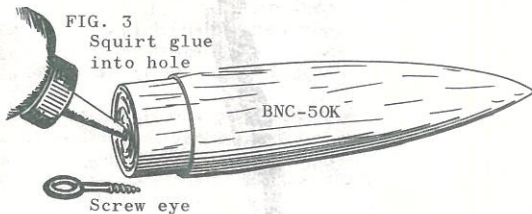

- (4) Cut two slits in one end of the body tube, the one directly under the other, 3/4" and 1" from the end of the tube. Cave in the section between the slits and hook the shock cord through the slits as shown. Press the caved-in portion of the tube outward until it is round again and apply glue to the cut edges and to the shock cord to anchor it in place.

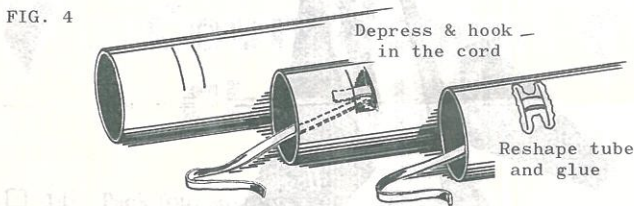


- (5) Cut out the shroud along its edge lines. This must be done carefully if it is to fit correctly. Form the shroud into a cone with the markings on the inside. Apply glue to the flap and press it into position. Hold it in place until the glue sets, then set it aside to dry thoroughly.

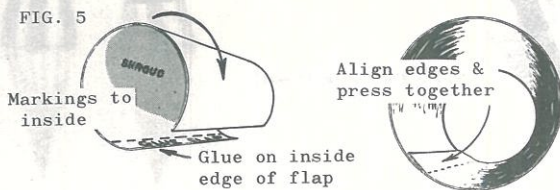


- (6) Glue the ring-coupler unit to the engine holder tube 1/4" from the end of the tube which has the engine block. To do this, mark the tube 1/4" from the end, apply glue around the tube at points 1-1/8" and 3/8" from the end and slide the ring-coupler


unit into place from the lower end of the engine holder tube. Apply a glue fillet to both ring-tube joints as shown. Let dry.

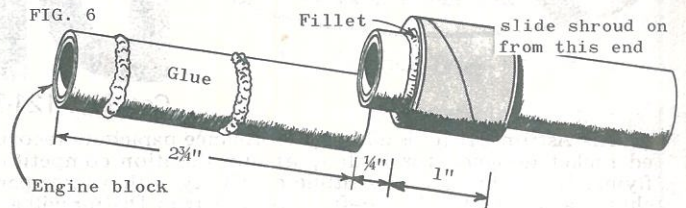


- (7) Slide the shroud all the way forward on the engine holder unit and glue in place as shown in fig. 7. Let the glue dry completely.

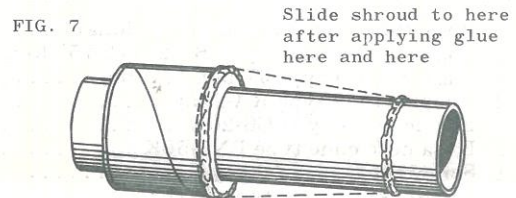

- (8) Apply glue all around the outside of the stage coupler and to the inside of the bottom end (end away from the shock cord) of the body tube. Slide the coupler into the body tube so the shroud laps against the body tube. Wipe off any excess glue from the outside of the body and shroud. Let this assembly dry thoroughly, then sand off any rough edges on the outside to obtain a smooth contour.

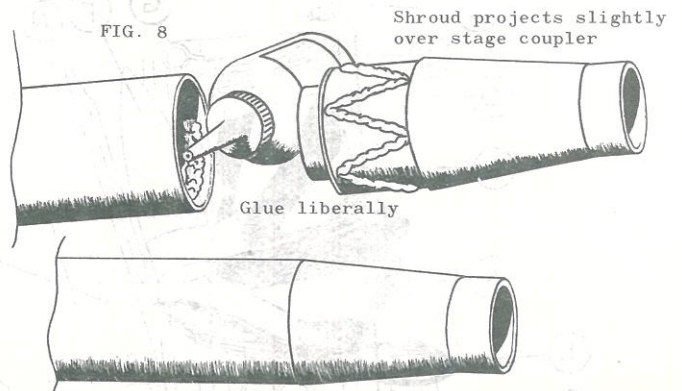

- (9) Cut out the body tube marking guide. Wrap it around the lower end of the body tube just ahead of the shroud and position it so one of the arrows is directly over the seam in the shroud. Mark the body tube under each arrow.

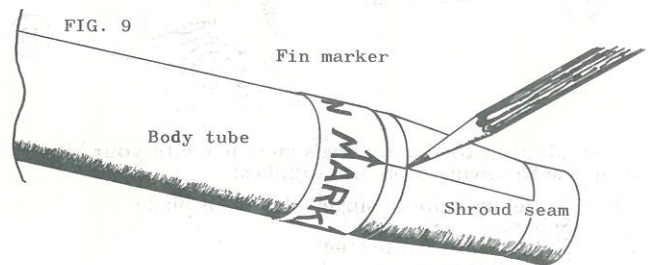

- (10) Cut out the fin pattern. Lay the pattern on the balsa fin stock with the grain of the wood and the grain shown on the pattern matched perfectly. Trace out three copies of the fin. Cut out the fins carefully. Be especially careful on edges which attach to the body so they will fit exactly. Sand the flat sides of each fin until smooth. Sand all edges of the fins except the edges which attach to the body until smooth and round.

- A. BNC-50K Nose cone
- B. BT-50H Body tube
- C. Engine Mount Assembly
- D. BFS-20 Fin stock
- E. Shroud from SP-14
- F. LL-2B Launching Lug
- G. RP-1 Wadding (not included)
- H. PK-12A or PK-24A
- I. SC-1 Shock cord
- J. SE-2A Screw eye
- K. SV-2 Interlocking snap



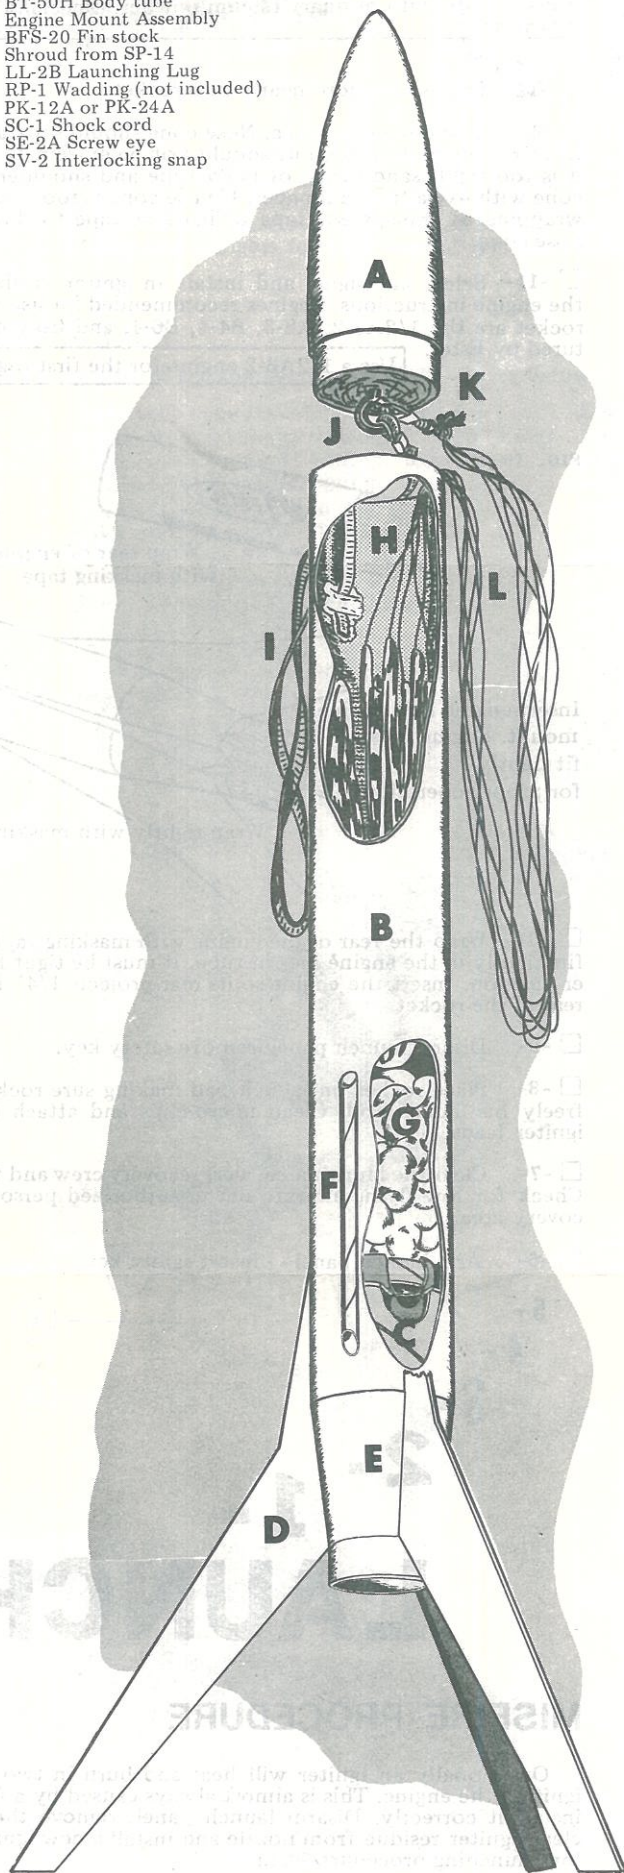


FIG. 10

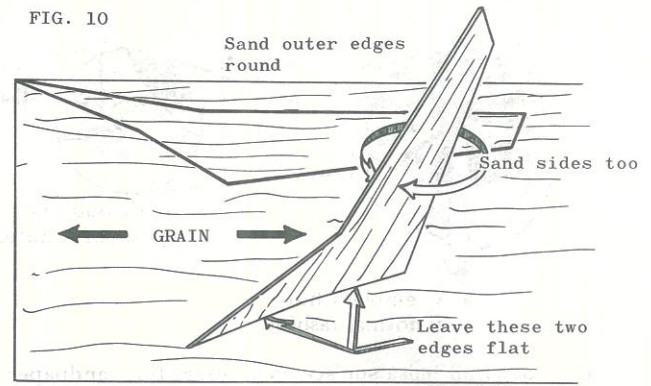

□ (11) Apply a line of glue to the inside edges of one of the fins and place it against the body exactly over one of the marks made in step (9). Align the fin by sighting along the body and adjusting it until the fin is parallel to the body and projects straight away from it. The trailing edge of the fin should meet the rear end of the shroud. Repeat this procedure with the other two fins. Do not set the rocket on its fins while the glue is wet.

FIG. 11

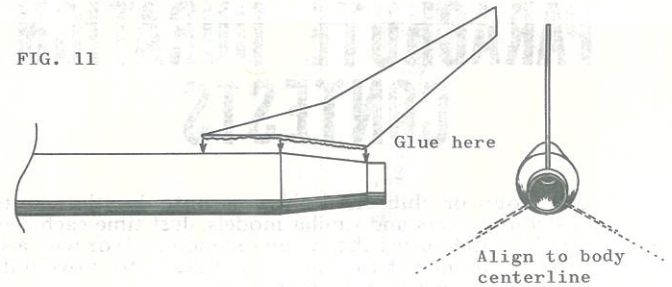

□ (12) Glue the launching lug to the body between two fins in the position shown in fig. 12A. Be sure the lug is aligned to point exactly forward. While the glue is still soft, check again to be sure the fins are aligned properly. Let the glue harden, then apply a glue fillet to each fin-body joint as shown in fig. 12B. Wipe off any excess glue with your finger.


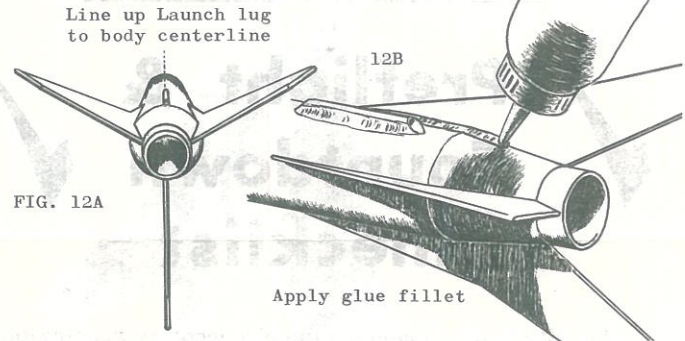


FIG. 12A

Assemble Your Parachutes

□ (13) Cut the shroud line cord into six 12" and six 24" pieces. Cut out the smaller parachute on the edge lines. Attach one 12" piece of shroud line to each point marked on the parachute using a tape disc as illustrated. Tie the free ends of the shroud lines securely to the small loop in a interlocking snap. Cut out the larger parachute and attach the 24" pieces of shroud line cord in the same way that you attached the lines to the other parachute. Tie the free ends of the lines to the remaining interlocking snap. Tie the free end of the shock cord to the screw eye in the nose cone.

FIG. 13

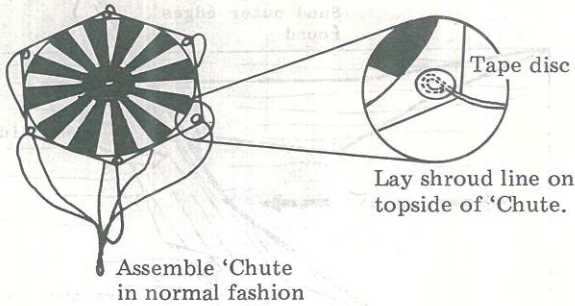

- (14) Sand all balsa surfaces with extra fine sandpaper. Apply a coat of sanding sealer to the balsa and sand again. Repeat until all surfaces look smooth and are smooth to the touch. Give the rocket at least one clean base coat of glossy white paint or dope, then give it at least one bright final coat of red, fluorescent orange, cerise, or other high-visibility color to aid tracking.

PARACHUTE DURATION CONTESTS


Your group or club can hold parachute duration contests with Astron Drifters and similar models. Just time each rocket with a wrist watch (using the sweep second hand) or with a stop watch from the instant the rocket first starts to move until it touches down or goes out of sight.

Possible variations on duration contests include limiting the size of engines or parachutes used or seeing who can come the closest to keeping his rocket up for a preset time (3 minutes, for example). Contests like this do much to help develop skill in parachute recovery.

Preflight & Countdown Checklist

- 14- Pack four squares of crumpled recovery wadding loosely into body tube.

FIG. 14

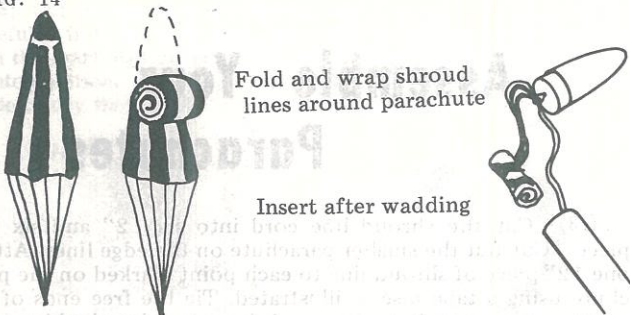

- 13- Fold the parachute into a triangular shape. Roll 'chute tightly as shown and wrap shroud lines around it. If 'chute is too large, unroll it and repack until it slides easily into rocket. A fit that is too tight may prevent parachute from ejecting properly.

NOTE: DO NOT pack parachute until you are actually ready to launch. For maximum parachute reliability, lightly dust 'chute with ordinary talcum powder, especially in cold weather.


- 12- Pack shock cord neatly into rocket.

Slide nose cone into place. Nose cone should separate easily from rocket body tube, but should not be extremely loose. If it is too tight, sand inside of body tube and shoulder of nose cone with extra fine sandpaper. If nose cone is too loose, add a wrapping of transparent tape or masking tape to shoulder of nose cone.

- 11- Select an engine and install an igniter as directed in the engine instructions. Engines recommended for use with this rocket are the 1/2A6-2, A8-3, B4-4, B6-4, and C6-5 manufactured by Estes.

Use a 1/2A6-2 engine for the first flight.

FIG. 15

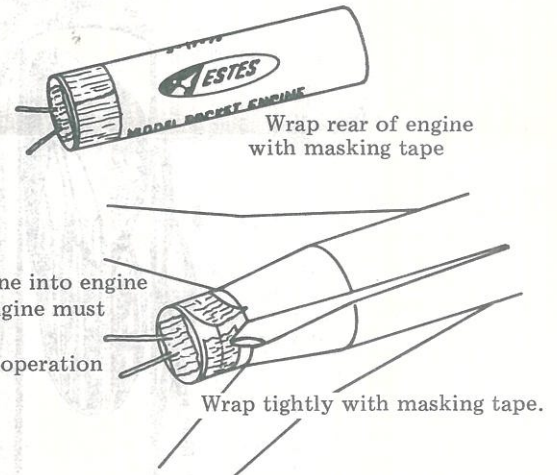

- 10- Wrap the rear of the engine with masking tape until it fits tightly in the engine mount tube. It must be tight for proper ejection. Insert the engine so its rear projects 1/4" from the rear of the rocket.

- 9- Disarm launch panel--remove safety key.

- 8- Place rocket on launch pad making sure rocket slides freely on launch rod. Clean micro-clips and attach them to igniter leads.

- 7- Clear the launch area, alert recovery crew and trackers. Check for low flying aircraft and unauthorized persons in recovery area.

- 6- Arm launch panel - - insert safety key.

5-
4-
3-
2-
1-

LAUNCH!

MISFIRE PROCEDURE

Occasionally an igniter will heat and burn in two without igniting the engine. This is almost always caused by a failure to install it correctly. Disarm launch panel, remove the model, clean igniter residue from nozzle and install a new igniter. Follow launching procedure again.