

# SPACE TRANSPORTER AMERICA

SKILL LEVEL 3


Recommended for Craftsman Rocketeers.

RECOMMENDED ENGINES:

B4-2 B6-4 C6-5

## BEFORE YOU START

Read all instructions before beginning work on your model. Make sure you have all parts and materials. When you are thoroughly familiar with the assembly procedure, begin construction. Check off each step as you complete it. In each step, test-fit the parts together before applying any glue. If some part doesn't fit properly, sand lightly or build up as required for precision assembly.

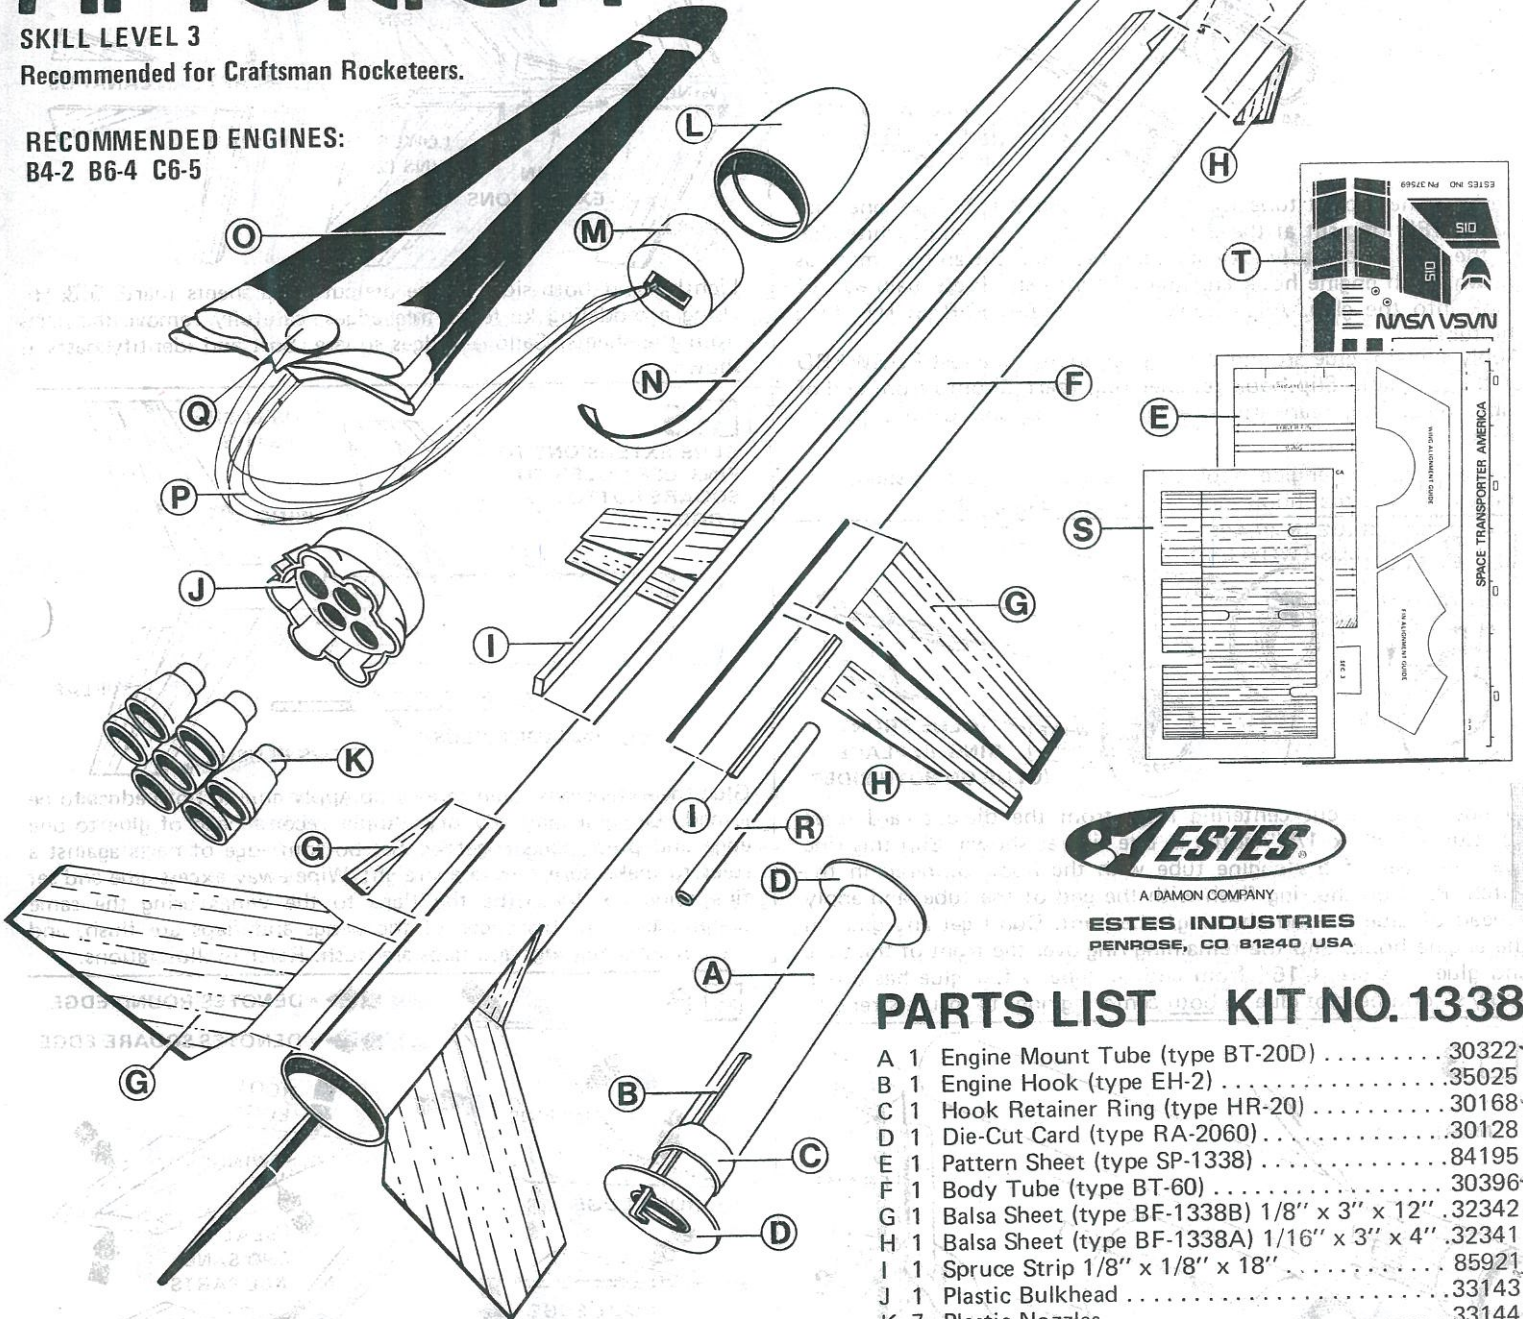

A DAMON COMPANY

ESTES INDUSTRIES  
PENROSE, CO 81240 USA

## PARTS LIST KIT NO. 1338

A	1	Engine Mount Tube (type BT-20D)	30322
B	1	Engine Hook (type EH-2)	35025
C	1	Hook Retainer Ring (type HR-20)	30168
D	1	Die-Cut Card (type RA-2060)	30128
E	1	Pattern Sheet (type SP-1338)	84195
F	1	Body Tube (type BT-60)	30396
G	1	Balsa Sheet (type BF-1338B) 1/8" x 3" x 12"	32342
H	1	Balsa Sheet (type BF-1338A) 1/16" x 3" x 4"	32341
I	1	Spruce Strip 1/8" x 1/8" x 18"	85921
J	1	Plastic Bulkhead	33143
K	7	Plastic Nozzles	33144
L	1	Plastic Nose Cone	33141
M	1	Plastic Nose Cone Insert	33142
N	1	Shock Cord (type SC-2MJ)	85738
O	1	Parachute (type PK-18A)	85566
P	1	Shroud Line (type SLT-108)	38239
Q	1	Tape Discs (type TD-3F)	38406
R	1	Launch Lug (type LL-2B)	38178
S	1	Embossed Wrapper Sheet (type EW-1338)	37699
T	1	Decal (type KD-1338)	37569

## TOOLS AND MATERIALS

In addition to the parts included in this kit you will need white glue (Titebond, Elmer's, or similar household white glue is recommended.), scissors, pencil, ruler, fine and extra-fine grit sandpaper, sanding sealer, masking tape, modeling knife with a sharp blade, medium size modeling paint brush, plastic model cement, camouflage gray spray paint, flat black spray paint, a bottle of flat black enamel paint, and a bottle of silver enamel paint. (See Step 20.)

33140 Plastic Parts 4/10/23